


PROTEKT	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

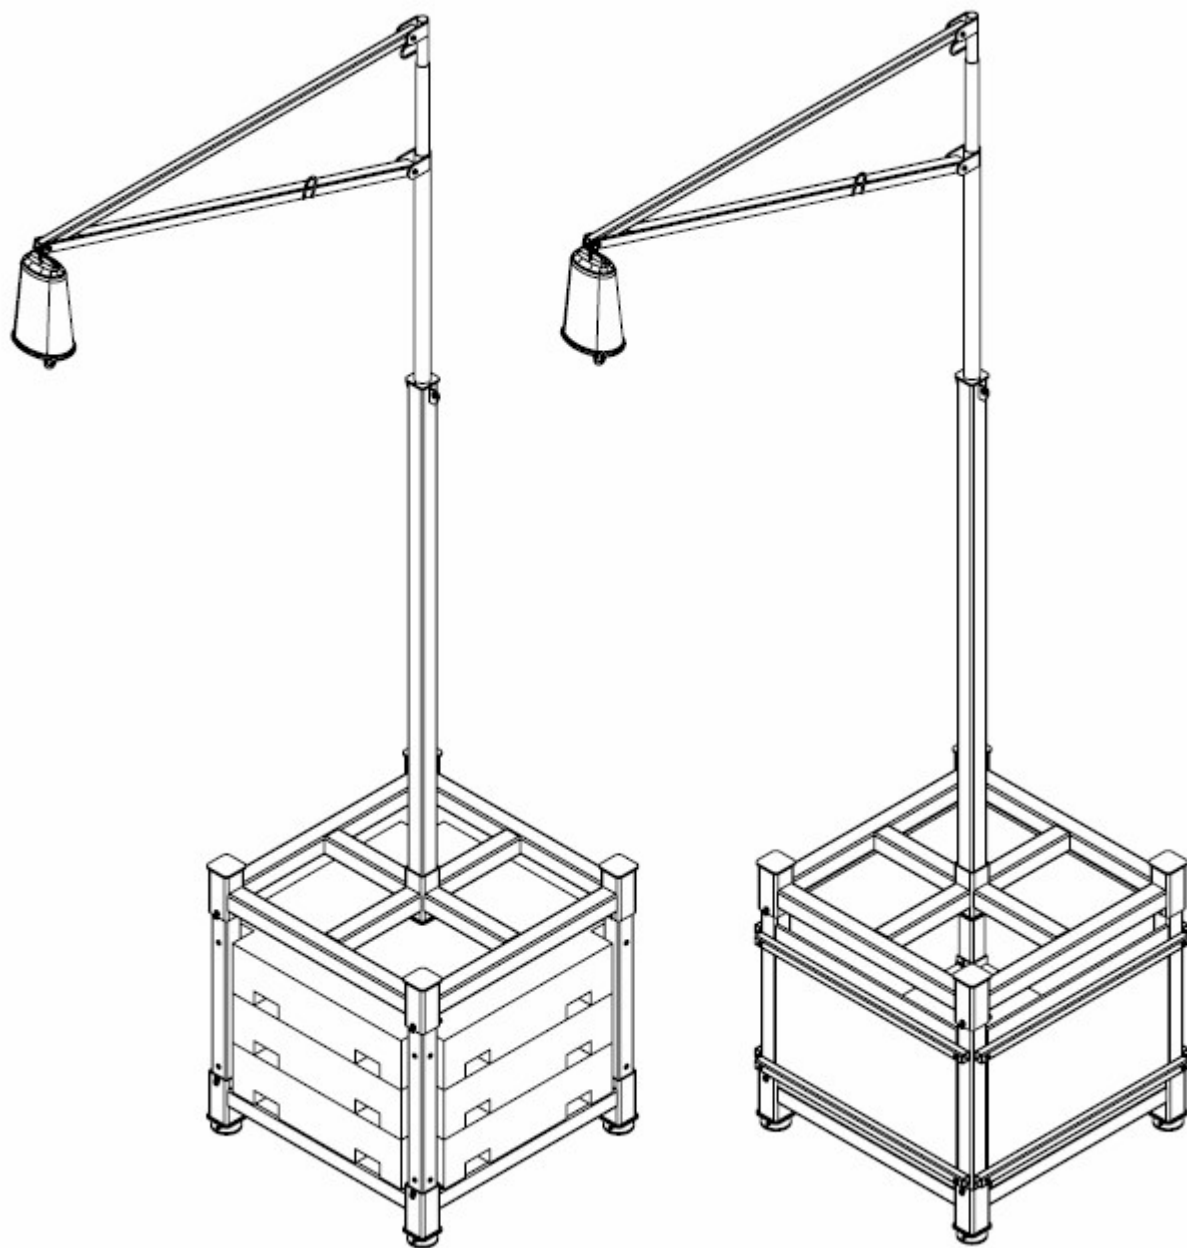

	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

TABLE OF CONTENTS

GENERAL INFORMATION	3
SAFETY INSTRUCTIONS	4
General information	4
Inspection of products and devices before use	4
Prohibition against modification of the device	4
Obligation to use individual fall protection equipment when installing the device	4
Inspection of the device after arresting a fall	5
Additional important information	5
TECHNICAL DATA	6
Components of the device / configurations.....	6
INSTALLATION OF THE DEVICE	7
Order of installation	7
Complete folding	14
Inspection of the device before use	14
Periodic inspection of the device	15
Work field range when using one device RJ200	15
Work field range when using two devices RJ200	16
Additional inspection of individual fall protection equipment	16
Notes	17

Manufacturer reserves the right to introduce changes to this manual.

	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

GENERAL INFORMATION

The device RJ200 is designed for safe work when loading and unloading of vehicles and levellers.

Anchor point for retractable type fall arrester is at 6.25m and enables operation at 5.00m from the “zero” level and within a 3.50m radius from the device's arm rotation axis.

For operation with the device RJ200 it is recommended to use retractable type fall arrester CR240/10m.

Retractable type fall arrester is installed on rotary arm.

User attaches snap hook of retractable type fall arrester to full body harness.

The device RJ200 complies with EN 795:2012 for Class B devices.

The device RJ200 is designed to provide protection against fall from a height only for one person.

The device should be placed in one location. If needed it can be moved to another location of adequate characteristics.

	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

SAFETY INSTRUCTIONS

General information

The device RJ200 is designed to be used only for purposes described in this instruction manual. It is designed to provide safety when working on a height during loading or unloading of vehicles and levellers.

- The product must not be used to lift or handle any loads.
- Do not modify or replace any components of the devices on your own, as this may affect characteristics of the device and the user's safety.
- Be particularly careful when handling the device from one location of its use to another. If any damages to the product are found, the affected part must be replaced.
- It is necessary to draw a rescue plan for the location where the device is to be used in case if the device RJ200 arrests a fall.
- It is recommended to use an additional line for lowering of snap hook of retractable type fall arrester to avoid continuous tension of winding spring of the device.

Inspection of products and devices before use

Before installation of the device always check whether all components are complete and in operating condition. Please check if the elements are not damaged or corroded.

Never use damaged or corroded elements, as this may affect the user's safety.

Prohibition against modification of the device

Do not replace original elements of the devices for other that are not designed for this device.

Never modify or repair the original elements of the device on your own.

Obligation to use individual fall protection equipment when installing the device

Always use individual fall protection equipment during installation of the product, when risk of a fall from a height is present. This also applies to working on aerial work platforms ("manlifts").



UŻYWAJ SZELEK
BEZPIECZEŃSTWA

USE FULL BODY HARNESS

	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

Inspection of the device after arresting a fall

When the device RJ200 has been used to arrest a fall, it must be withdrawn from use immediately and inspected by a competent person. In case of any doubts please contact the manufacturer.


Additional important information

- Before working with use of the device RJ200 always draw a plan of a potential rescue action after arresting a fall.
- Use the device after inspection only.
- Limit the access of unauthorised personnel to working area of the device.
- Before working with use of the device RJ200 please check if all pins and cotters are present and installed correctly.
- Keep location where the device is used clean and tidy.

PROTEKT	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

TECHNICAL DATA

Components of the device / configurations

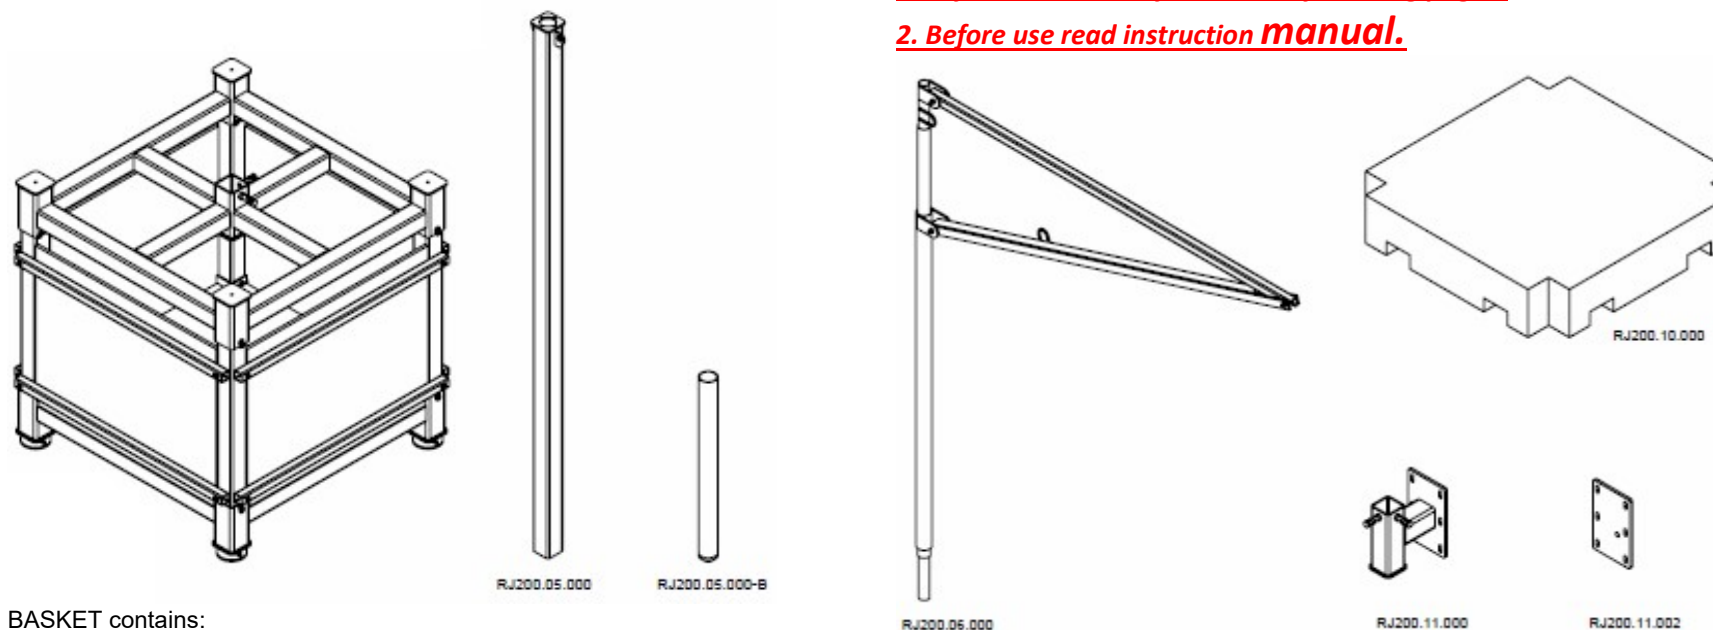

BASKET contains:

- RJ200.01.000 – 1 pc
- RJ200.02.000 – 4 pcs
- RJ200.03.000 – 4 pcs
- RJ200.04.000 - 1 pc
- RJ200.07.000 - 8 pcs
- RJ200.08.000 - 1 pc
- RJ200.09.000 - 4 pcs

NOTE!!!

1. Refer to methods of use on the following pages.


2. Before use read instruction *manual*.

RJ200 – spare parts price list										
No.	Part (drawing) number	Quantity in the set	Part name	Method of use no. 1	Method of use no. 2	Method of use no. 3 (with socket)	Example uses			Weight of the set [kg]
							Method of use no. 3B (with loosen socket)	Method of use no. 4	Method of use no. 5 and no. 6	
16	RJ200.11.002	1	Płyta (Plate)					x		11.900
15	RJ200.11.000	1	Gniazdo boczne (Side seat)					x	x	23.950
14	RJ200.10.000	3	Odważnik betonowy (Concrete unit weight)		x					3,000.000
13	RJ200.05.000-B		Gniazdo tracone				x			2.125

	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

			(Housing tube)							
12		16	Śruba M12x90 (Bolt)	x	x					
11		16	Podkładka M12 (Washer)	x	x					
10	ASB500-130	8	Locking pin	x	x					
9	RJ200.09.000	4	Płyta OSB #18 mm boczna (OSB side panel)	x	x					12.400
8	RJ200.08.000	1	Płyta OSB #18 mm dolna (OSB bottom panel)	x	x					20.200
7	RJ200.07.000	8	Belka (beam)	x	x					7.200
6	RJ200.06.000	1	Ramię (Arm)	x	x	x	x	x	x	65.000
5	RJ200.05.000	1	Gniazdo (Socket)	x	x	x		x	x	76.400
4	RJ200.04.000	1	Pokrywka (Cover)	x	x					138.000
3	RJ200.03.000	4	Noga (Leg)	x	x					23.800
2	RJ200.02.000	4	Podpora (Support)	x	x					1.690
1	RJ200.01.000	1	Podstawa (Base)	x	x					132.000

PROTEKT	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

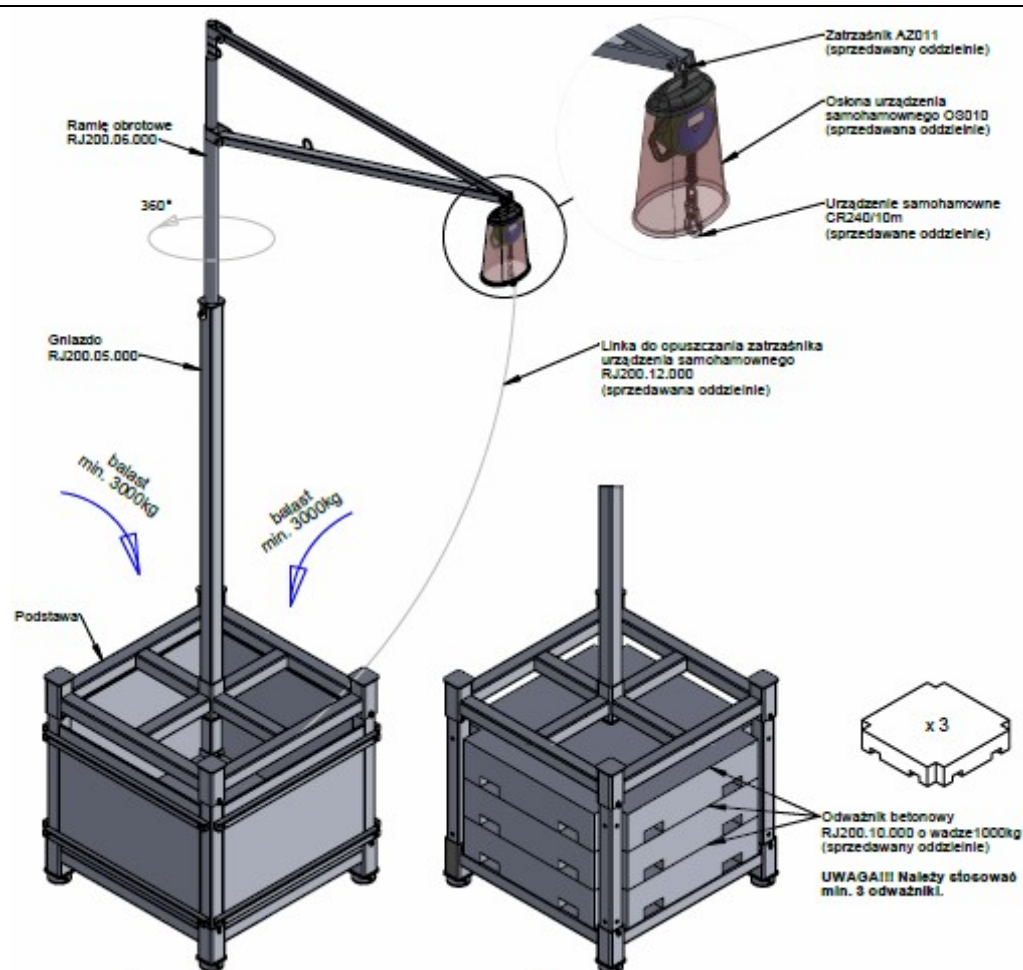

METHOD OF USE NO. 1

The device RJ200 can be loaded with any ballast of a total weight of min. 3000kg.

Ballast can be placed (poured) into the prepared case.

METHOD OF USE NO. 2

The device RJ200 can be loaded by specially prepared weights with a weight of 1000kg each.

Place the weights in the case frame using forklift truck.


NOTE!!! Use at least 3 weights.

TECHNICAL DATA

Components of the device / configurations

Technical parameters RJ200:

Dimensions:

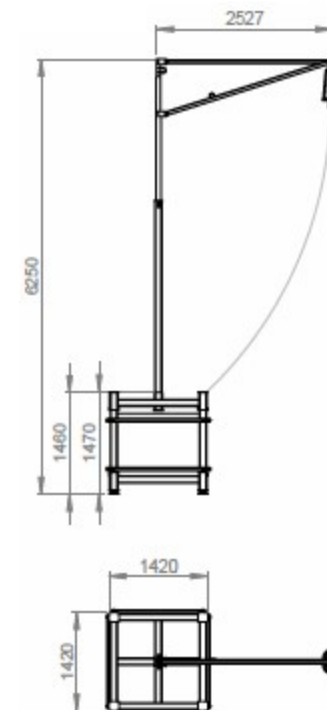

WEIGHT:

Base - 500.0kg +/- 20.0kg

Socket - 76.4kg

Rotary arm - 65.0kg

Concrete unit weight - 1000.0kg +/- 20.0kg

CONDITIONS OF USE:

Weather conditions: (+50)°C; (-30)°C; humidity.

Static strength: min. 12 kN (in accordance with EN795:2012 Class B).

Number of co-users: 1

MATERIAL:

Powder coated steel





Ramie obrotowe

Rotary arm

	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

Gniazdo	Socket	USE: Loading / unloading of trucks Inspection works on trucks Works at a height <u>NOTE!!!</u> <u>1. Refer to other methods of use on the following pages.</u> <u>2. Before use read instruction manual.</u>
Balast min. 3000 kg	Ballast min. 3000kg	
Podstawa	Base	
Zatrzaśnik AZ011 (sprzedawany oddzielnie)	Snap hook AZ011 (sold separately)	
Ostona urządzenia samohamownego OS010 (sprzedawana oddzielnie)	Retractable type fall arrester guard OS010 (sold separately)	
Urządzenie samohamowne CR240/10m (sprzedawane oddzielnie)	Retractable type fall arrester CR240/10m (sold separately)	
Linka do opuszczania zatrzaśnika urządzenia samohamownego RJ200.12.000 (sprzedawana oddzielnie)	Line for lowering of snap hook of retractable type fall arrester RJ200.12.000 (sold separately)	
Odważnik betonowy RJ200.10.000 o wadze 1000kg (sprzedawany oddzielnie)	Concrete unit weight RJ200.10.000 with a weight of 1000kg (sold separately)	
UWAGA!!! Należy stosować min. 3 odważniki.	NOTE!!! Use at least 3 weights.	


PROTEKT	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

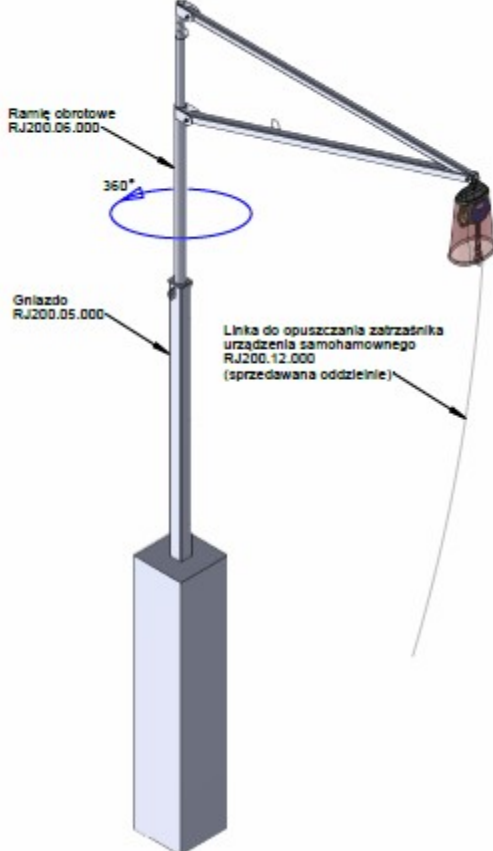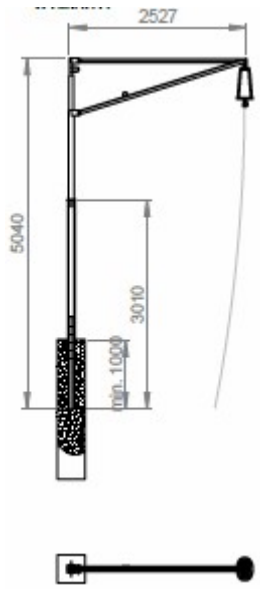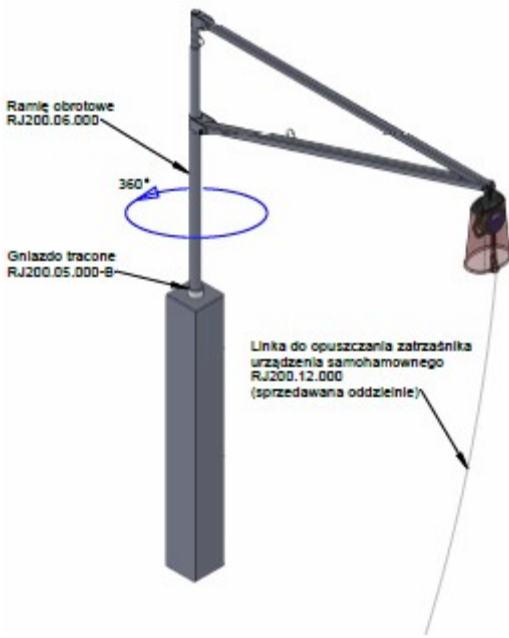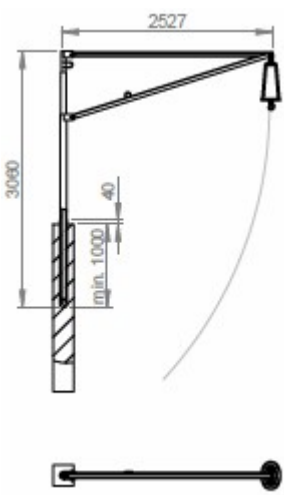 USE NO. 3 The device RJ200 can be used as an anchor point to be embedded in concrete elements (e.g. columns, attics, etc.). Socket is embedded in a concrete structure, and arm can be moved between sockets. NOTE!!! Minimum depth for embedding the socket in concrete is 1.0m. <table data-bbox="98 1370 604 1463"><tr><td>Ramię obrotowe</td><td>Rotary arm</td></tr><tr><td>Gniazdo</td><td>Socket</td></tr><tr><td>Linka do</td><td>Line for lowering of</td></tr></table>	Ramię obrotowe	Rotary arm	Gniazdo	Socket	Linka do	Line for lowering of	Technical parameters RJ200: Dimensions:  WEIGHT: Socket - 76.4kg Rotary arm - 65.0kg CONDITIONS OF USE: Weather conditions: (+50)°C; (-30)°C; humidity. Static strength: min. 12 kN (in accordance with EN795:2012 Class B). Number of co-users: 1 MATERIAL: Powder coated steel USE: Construction works on construction site or boarding works Works at a height	TECHNICAL DATA Components of the device / configurations  METHOD OF USE NO. 3B The device RJ200 can be used as an anchor point to be embedded in concrete elements (e.g. columns, attics, etc.). Loosen socket is embedded in a concrete structure, while arm can be moved between sockets. After work is completed the socket can be poured out with concrete and left in the structure. NOTE!!! Minimum depth for embedding the socket in concrete is 1.0m. <table data-bbox="1048 1211 1812 1434"><tr><td>Ramię obrotowe</td><td>Rotary arm</td></tr><tr><td>Gniazdo tracone</td><td>Housing tube</td></tr><tr><td>Linka do opuszczania zatrzaśnika urządzenia samohamownego RJ200.12.000 (sprzedawana oddzielnie)</td><td>Line for lowering of snap hook of retractable type fall arrester RJ200.12.000 (sold separately)</td></tr></table>	Ramię obrotowe	Rotary arm	Gniazdo tracone	Housing tube	Linka do opuszczania zatrzaśnika urządzenia samohamownego RJ200.12.000 (sprzedawana oddzielnie)	Line for lowering of snap hook of retractable type fall arrester RJ200.12.000 (sold separately)	Technical parameters RJ200: Dimensions:  WEIGHT: Loosen socket - 2.1kg Rotary arm - 65.0kg CONDITIONS OF USE: Weather conditions: (+50)°C; (-30)°C; humidity. Static strength: min. 12 kN (in accordance with EN795:2012 Class B). Number of co-users: 1 MATERIAL: Powder coated steel Plastic USE: Construction works on construction site or boarding works Works at a height
Ramię obrotowe	Rotary arm														
Gniazdo	Socket														
Linka do	Line for lowering of														
Ramię obrotowe	Rotary arm														
Gniazdo tracone	Housing tube														
Linka do opuszczania zatrzaśnika urządzenia samohamownego RJ200.12.000 (sprzedawana oddzielnie)	Line for lowering of snap hook of retractable type fall arrester RJ200.12.000 (sold separately)														

	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

opuszczania zatrzaśnika urządzenia samohamownego RJ200.12.000 (sprzedawana oddzielnie)	snap hook of retractable type fall arrester RJ200.12.000 (sold separately)			NOTE!!! <u>1. Refer to other methods of use on the following pages.</u> <u>2. Before use read instruction manual.</u>
--	--	--	--	--

PROTEKT	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

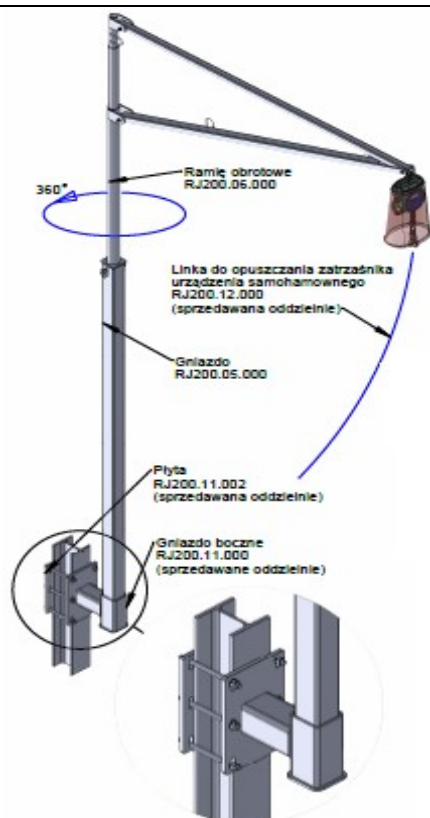


USE NO. 4

Device RJ200 can be used as an anchor point for mounting on steel structures using special side seat and retaining plate and screws or threaded rods M16.

Side seat with retaining plate forms a "clamp" around the steel structure without interfering with its framework.

TECHNICAL PARAMETERS RJ200: DIMENSIONS:

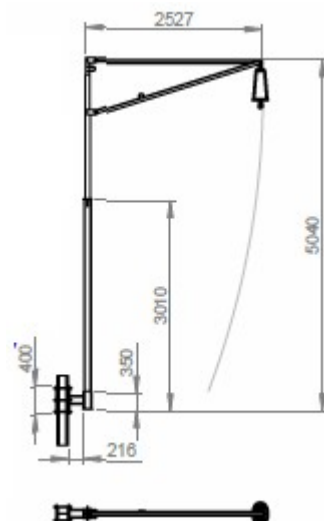

WEIGHT:

Socket - 76.4kg
Rotary arm - 65.0kg
Side seat - 25.0kg
Plate - 12.0kg

CONDITIONS OF USE:

Weather conditions: (+50)°C; (-30)°C; humidity.

Static strength: min. 12 kN (in accordance with EN795:2012 Class B).

Number of co-users: 1


MATERIAL:

Powder coated steel

USE:

Construction works on steel structures, works on façades based on steel structures
Works at a height


TECHNICAL DATA Components of the device / configurations

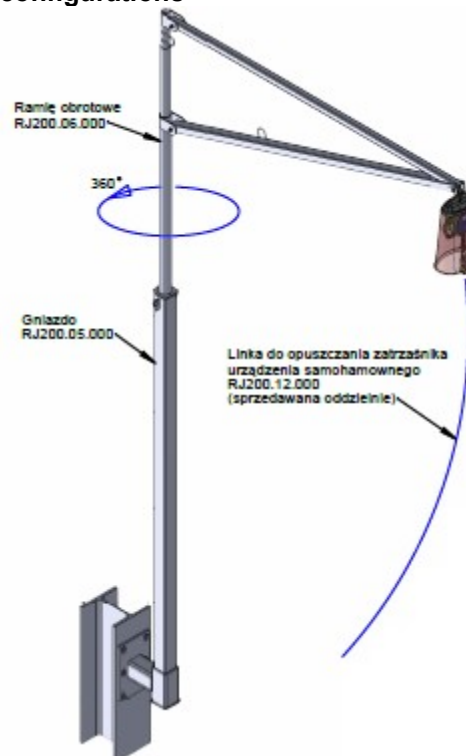

METHOD OF USE NO. 5

Device RJ200 can be used as an anchor point for mounting on steel structures using special side seat and screws or threaded rods M16.

It is required to prepare bore holes in the structure.

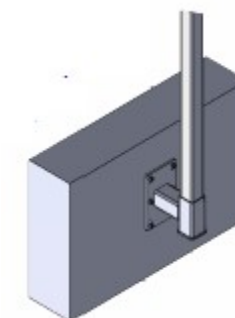


METHOD OF USE NO. 6

Device RJ200 can be used as an anchor point for mounting on concrete structures using special side seat and mechanical or chemical anchors M16.

It is required to prepare bore holes in the structure.

TECHNICAL PARAMETERS RJ200: DIMENSIONS:

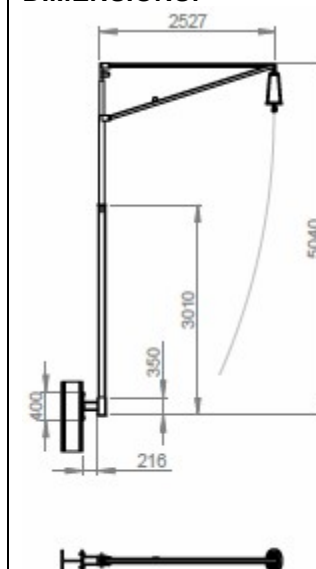

WEIGHT:

Socket - 76.4kg
Rotary arm - 65.0kg
Side seat - 25.0kg

CONDITIONS OF USE:

Weather conditions: (+50)°C; (-30)°C; humidity.

Static strength: min. 12 kN (in accordance with EN795:2012 Class B).

Number of co-users: 1

MATERIAL:

Powder coated steel

USE:

Construction works on steel or reinforced-concrete structures, works on façades based on steel or reinforced-concrete structures
Works at a height

	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

<table><tr><td>Ramię obrotowe</td><td>Rotary arm</td></tr><tr><td>Linka do opuszczania zatrzaśnika urządzenia samohamownego RJ200.12.000 (sprzedawana oddzielnie)</td><td>Line for lowering of snap hook of retractable type fall arrester RJ200.12.000 (sold separately)</td></tr><tr><td>Gniazdo</td><td>Socket</td></tr><tr><td>Płyta RJ200.11.002 (sprzedawana oddzielnie)</td><td>Plate RJ200.11.002 (sold separately)</td></tr><tr><td>Gniazdo boczne RJ200.11.000 (sprzedawane oddzielnie)</td><td>Side seat RJ200.11.000 (sold separately)</td></tr></table>			Ramię obrotowe	Rotary arm	Linka do opuszczania zatrzaśnika urządzenia samohamownego RJ200.12.000 (sprzedawana oddzielnie)	Line for lowering of snap hook of retractable type fall arrester RJ200.12.000 (sold separately)	Gniazdo	Socket	Płyta RJ200.11.002 (sprzedawana oddzielnie)	Plate RJ200.11.002 (sold separately)	Gniazdo boczne RJ200.11.000 (sprzedawane oddzielnie)	Side seat RJ200.11.000 (sold separately)	<u>NOTE!!!</u> <u>1. Refer to other methods of use on the previous pages.</u> <u>2. Before use read instruction manual.</u>
Ramię obrotowe	Rotary arm												
Linka do opuszczania zatrzaśnika urządzenia samohamownego RJ200.12.000 (sprzedawana oddzielnie)	Line for lowering of snap hook of retractable type fall arrester RJ200.12.000 (sold separately)												
Gniazdo	Socket												
Płyta RJ200.11.002 (sprzedawana oddzielnie)	Plate RJ200.11.002 (sold separately)												
Gniazdo boczne RJ200.11.000 (sprzedawane oddzielnie)	Side seat RJ200.11.000 (sold separately)												

PROTEKT	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

INSTALLATION OF THE DEVICE (Method of use no. 1 and 2)

Order of installation

Before installing the device RJ200 prepare necessary tools as follows:



- Hammer
- Spirit level
- Combination open-end wrenches 19mm (2 pcs.)

List of elements:

12	Śruba M12x90 (Bolt)	16	galvanized steel	DIN 931	0.090	
11	Podkładka M12 (Washer)	16	galvanized steel	DIN 125-A	0.010	
10	Locking pin	8	S235/A2 (steel)	ASB500-130	0.250	
9	Płyta OSB #18mm boczna (OSB side panel)	4	OSB panel #18mm (OSB)	RJ200.09.000	12.400	
8	Płyta OSB #18mm dolna (OSB bottom panel)	1	OSB panel #18mm (OSB)	RJ200.08.000	20.200	
7	Belka (Beam)	8	S235 (steel)	RJ200.07.000	7.200	
6	Ramię (Arm)	1	S235 (steel)	RJ200.06.000	65.000	
5	Gniazdo (Socket)	1	S235 (steel)	RJ200.05.000	76.400	
4	Pokrywa (Cover)	1	S235 (steel)	RJ200.04.000	138.000	
3	Noga (Leg)	4	S235 (steel)	RJ200.03.000	23.800	
2	Podpora (Support)	4	S235 (steel)	RJ200.02.000	1.690	
1	Podstawa (Base)	1	S235 (steel)	RJ200.01.000	132.000	
Nr. części. (Part No.)	Nazwa części / zespołu (Part / Assembly name)	Sztuk (pcs).	Materiał (Material)	Nr rys. / Nr normy (Drawing No / Standard No)	Ciężar [kg] (Weight)	Uwagi (Notice)

1. Level base "1" using four supports "2".

Maximum inclination angle of a surface on which the device can be placed is shown in figure above.

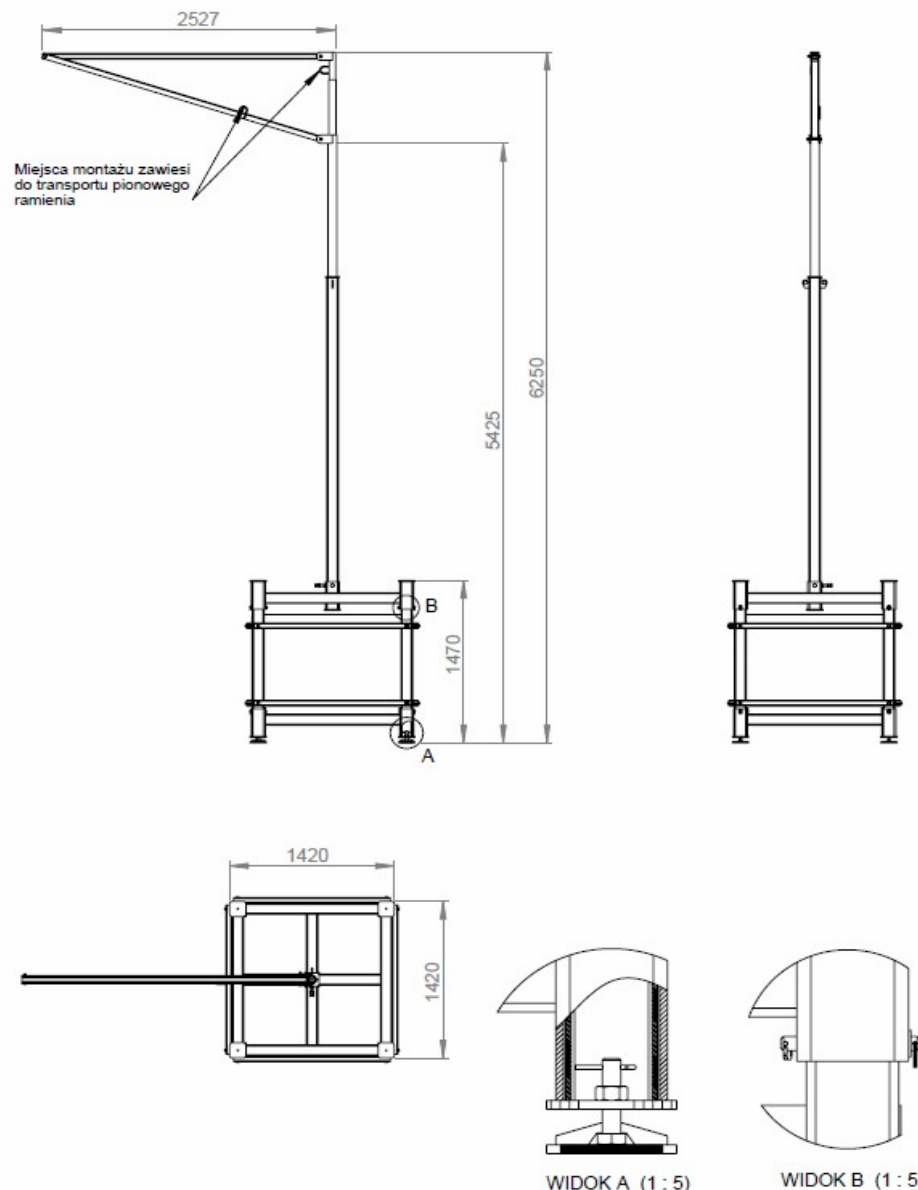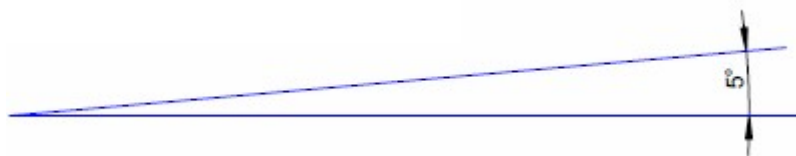

	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

2. Insert four legs “3” into previously levelled base “1” and lock them with four pins “10” and push cotters at the end. 3. Using forklift truck place three concrete unit weights (RJ200.10.000) with a weight of 1000kg each on base “1” or fix beams “7” to four legs “3” with bolts M12 delivered in the set. On base “1” place OSB bottom panel “8” and then four OSB side panels “9”. 4. Fix socket “5” in cover “4” to marker. 5. Using forklift truck fix cover “4” with previously installed socket “5” on legs “3” and lock it with four pins “10” and push cotters at the end. 6. Fill the case with ballast with a total weight of min. 3000kg (not applicable if concrete unit weights are used). 7. Push arm “6” in to socket “5” to marker. To perform this operation use a crane or other lifting device, e.g. mobile crane. Lift the frame in marked points. Before that lock possibility of automatic arm rotation by attaching line for lowering of snap hook of retractable type fall arrester to cover “4”.	Miejsca montażu zawiesi do transportu pionowego ramienia	Points for installation of slings for lifting of the arm
	WIDOK A	VIEW A
	WIDOK B	VIEW B

PROTEKT	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

INSTALLATION OF THE DEVICE (Method of use no. 3 and 3B)

Order of installation

Before installing the device RJ200 prepare necessary tools as follows:

- Hammer
- Spirit level
- Combination open-end wrenches 19mm (2 pcs.)

List of elements:

3	Gniazdo tracone (Housing tube)	1	PVC	RJ200.05.000-B	2.125	
2	Gniazdo (Socket)	1	S235 (steel)	RJ200.05.000	76.400	
1	Ramię (Arm)	1	S235 (steel)	RJ200.06.000	65.000	
Nr. części (Part No.)	Nazwa części / zespołu (Part / Assembly name)	Sztuk (pcs).	Materiał (Material)	Nr rys. / Nr normy (Drawing No / Standard No)	Ciężar [kg] (Weight)	Uwagi (Notice)

1. Mount socket "2" or loosen socket "3" in "wet concrete".

Socket mounting depth is min. 1000mm. Minimum requirements for concrete (beam) are given in the figure.

Plumb the mounted socket. Maximum deviation angle from the vertical cannot exceed 2°.



2. Wait until concrete reaches its required strength. Protect the hole where the socket is mounted against any contamination.


4. Mount rotary arm "1" in the previously mounted socket "2".

5. The socket can be used several times by moving the arm between sockets.

6. After all works employing the arm are completed:


- socket "2" can be cut off and poured out with concrete
- loosen socket "3" can be poured out with concrete

Method of use no. 3

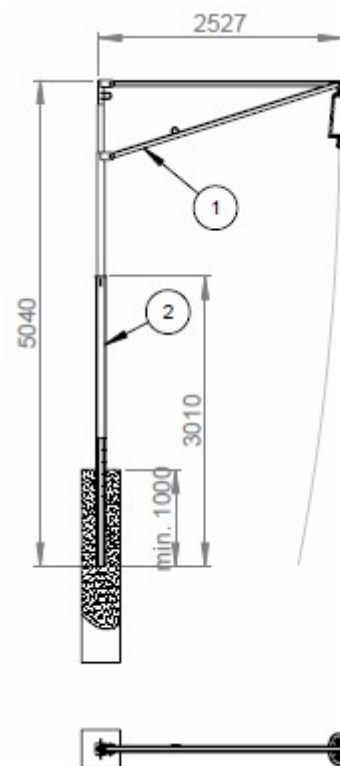

Concrete min. B20

Method of use no. 3B

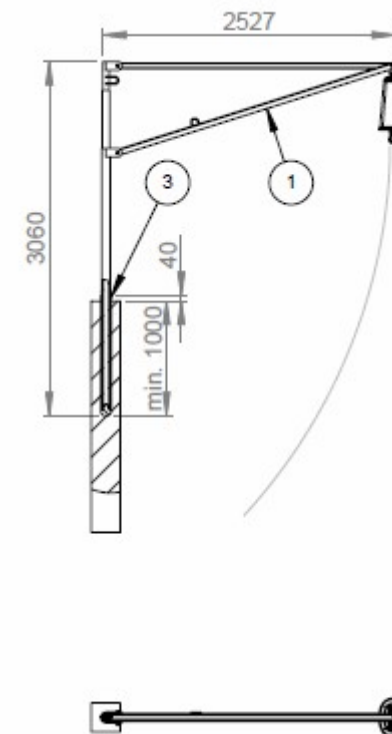

PROTEKT	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

INSTALLATION OF THE DEVICE (Method of use no. 4)

Order of installation

Before installing the device RJ200 prepare necessary tools as follows:

- Hammer
- Spirit level
- Set of combination open-end wrenches

List of elements:


4	Płyta (Plate)	1	S235 (steel)	RJ200.11.002	11.900	
3	Gniazdo boczne (Side seat)	1	S235 (steel)	RJ200.11.000	25.380	
2	Gniazdo (Socket)	1	S235 (steel)	RJ200.05.000	76.400	
1	Ramię (Arm)	1	S235 (steel)	RJ200.06.000	65.000	
Nr. część. (Part No.)	Nazwa części / zespołu (Part / Assembly name)	Sztuk (pcs).	Materiał (Material)	Nr rys. / Nr normy (Drawing No / Standard No)	Ciężar [kg] (Weight)	Uwagi (Notice)

1. Fix side seat "3" on column using plate "4" on vertical column (use it as a clamp). Minimum requirements for column are given in the figure. Plumb the mounted socket. Maximum deviation angle from the vertical cannot exceed 2°.





2. Mount rotary arm "1" in the previously mounted socket "3".
3. The socket can be used several times by moving the arm between sockets.

Method of use no. 4

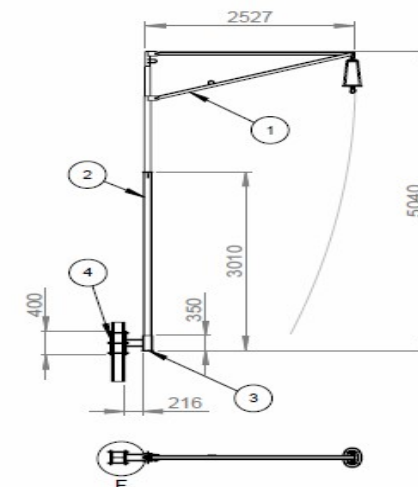

- 6 szt. pręt gwintowany M16 kl. 8.8 ocynk.
- 12 szt. podkładka 17 ocynk.
- 12 szt. nakrętka samoham. M16 kl. 8 ocynk.

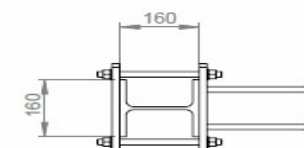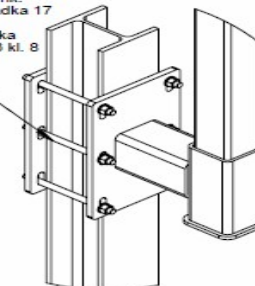

- | | |
|--|---|
| - 6 szt. pręt gwintowany M16 kl. 8.8 ocynk. | - 6 pcs. threaded rod M16 cl. 8.8 galvanized |
| - 12 szt. podkładka 17 ocynk. | - 12 pcs. washer 17 galvanized |
| - 12 szt. nakrętka samoham. M16 kl. 8 ocynk. | - 12 pcs. self-locking nut M16 cl. 8 galvanized |

INSTALLATION OF THE DEVICE (Method of use no. 5 and 6)

Order of installation

Before installing the device RJ200 prepare necessary tools as follows:

- Hammer
- Spirit level
- Set of combination open-end wrenches
- Hammer drill (for mounting in concrete)
- Masonry drill Ø18mm (for fixing of chemical anchors in concrete)
- Masonry drill Ø16mm (for fixing of mechanical anchors in concrete)

List of elements:

3	Gniazdo boczne (Side seat)	1	S235 (steel)	RJ200.11.000	25.380	
2	Gniazdo (Socket)	1	S235 (steel)	RJ200.05.000	76.400	
1	Ramię (Arm)	1	S235 (steel)	RJ200.06.000	65.000	
Nr. częś. (Part No.)	Nazwa części / zespołu (Part / Assembly name)	Sztuk (pcs).	Materiał (Material)	Nr rys. / Nr normy (Drawing No / Standard No)	Ciężar [kg] (Weight)	Uwagi (Notice)

1. Fix side seat "3" on column. Minimum requirements for column are given in the figure. Plumb the mounted socket. Maximum deviation angle from the vertical cannot exceed 2° .




2. Mount rotary arm "1" in the previously mounted socket "3".

3. The socket can be used several times by moving the arm between sockets.

4. After all works employing the arm are completed the socket can be removed or left for further use.


Method of use no. 5 and 6

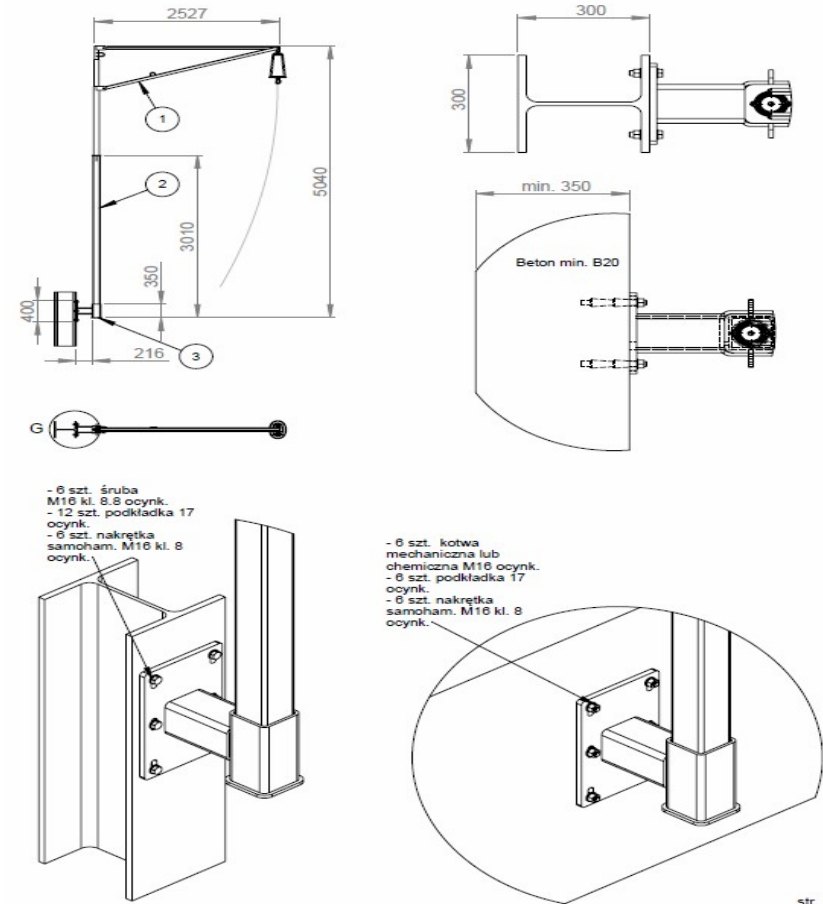

Min.	Min.
Beton min. B20	Concrete min. B20
- 6 szt. śruba M16 kl. 8.8 ocynk.	- 6 pcs. bolt M16 cl. 8.8 galvanized
- 12 szt. podkładka 17 ocynk.	- 12 pcs. washer 17 galvanized
- 6 szt. nakrętka samoham. M16 kl. 8 ocynk.	- 6 pcs. self-locking nut M16 cl. 8 galvanized
- 6 szt. kotwa mechaniczna lub chemiczna M16 ocynk.	- 6 pcs. mechanical or chemical anchor M16 galvanized
- 6 szt. podkładka 17 ocynk.	- 6 pcs. washer 17 galvanized
- 6 szt. nakrętka samoham. M16 kl. 8 ocynk.	- 6 pcs. self-locking nut M16 cl. 8 galvanized

PROTEKT	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

Complete folding

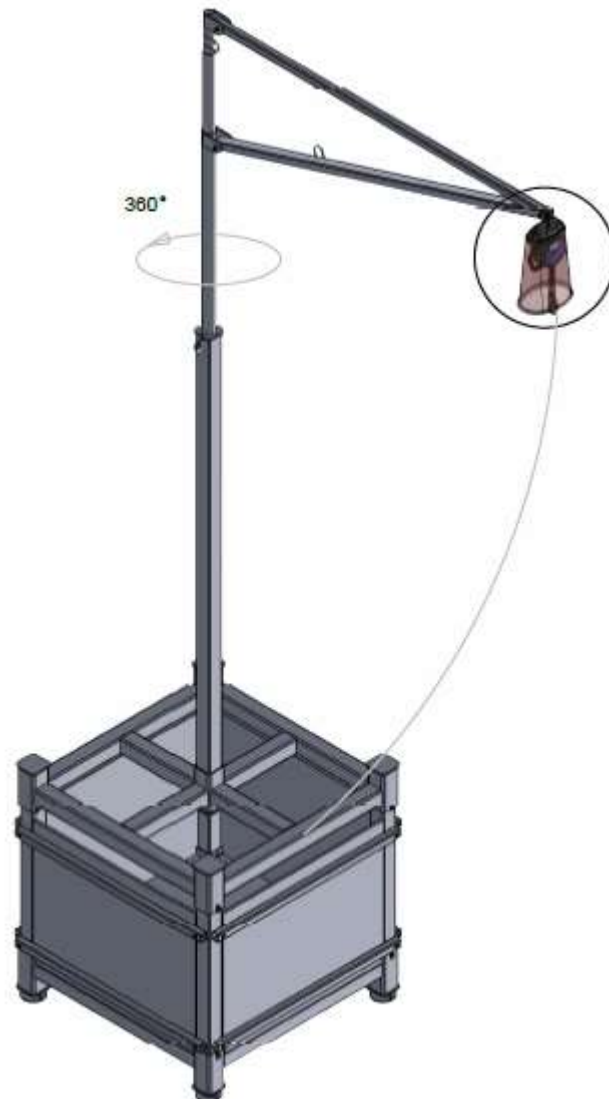

Inspection of the device before use

Before each use of the device carry out its visual inspection

- Make sure that there are no cracks or deformations on the device
- Make sure that the device can rotate
- Make sure that the device is upright
- Check function of the lock gear of retractable type fall arrester
- Check depth of mounting of elements to markers

PROTEKT	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY


Periodic inspection of the device

According to EN 365 it is recommended to perform periodic inspections of the device RJ200. Periodic inspection should be carried out by a service point authorized by the manufacturer. Periodic inspection (min. once a year) should be carried out by a competent person or a service point authorised by the manufacturer. In case of any doubts please contact the manufacturer. Inspection activities:

- Inspection of weld seams, deformations, cracks
- Inspection of retractable type fall arrester
- Inspection of bolts, pins, cotters
- Quality assessment of surfaces, corrosion centres

Work field range when using one device RJ200

Place base of the device within 100mm from the site where works are performed.

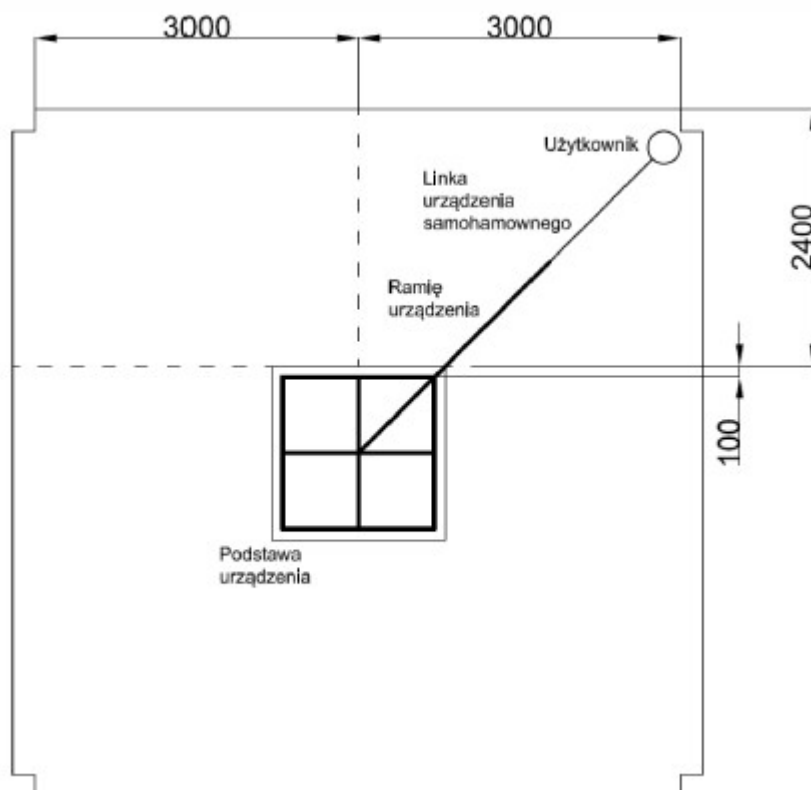


Użytkownik	User
Linka urządzenia samohamownego	Line of retractable type fall arrester
Ramię urządzenia	Arm of device
Podstawa urządzenia	Base of device

Dimensions are given in millimetres [mm].

PROTEKT	DAVIT	INSTRUCTION MANUAL
EN 795:2012 Class B	Reference number: RJ200	BEFORE USE READ THIS MANUAL CAREFULLY

Work field range when using two devices RJ200

Place bases of the devices within 100mm from the site where works are performed.

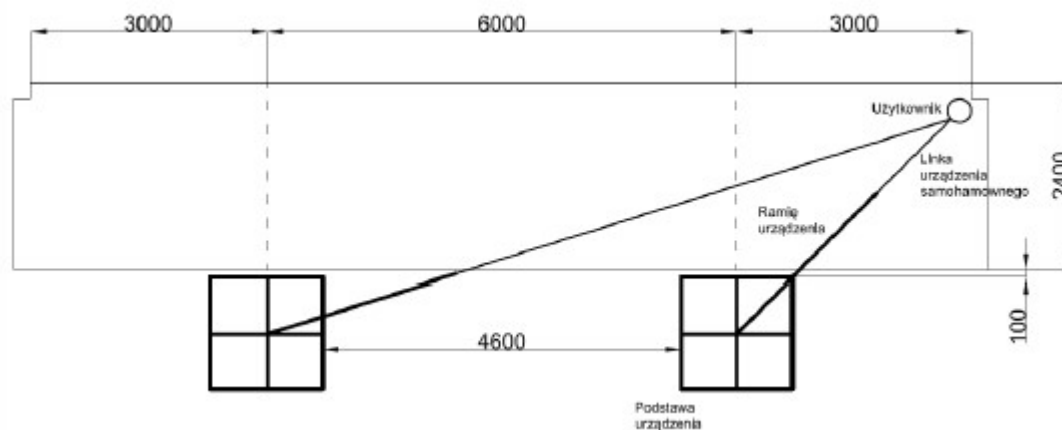

Użytkownik	User
Linka urządzenia samohamownego	Line of retractable type fall arrester
Ramię urządzenia	Arm of device
Podstawa urządzenia	Base of device

Dimensions are given in millimetres [mm].

Additional inspection of individual fall protection equipment

- When working with the device RJ200 use a retractable type fall arrester
- Inspect if snap hooks are closed and locked
- Use correctly adjusted full body harness

