

PremAire® Combination

Combination Airline Escape Respirator

MSA
The Safety Company

1




Put on belt and holster assembly.

2



Put on shoulder harness with cylinder demand valve airline assembly.

3

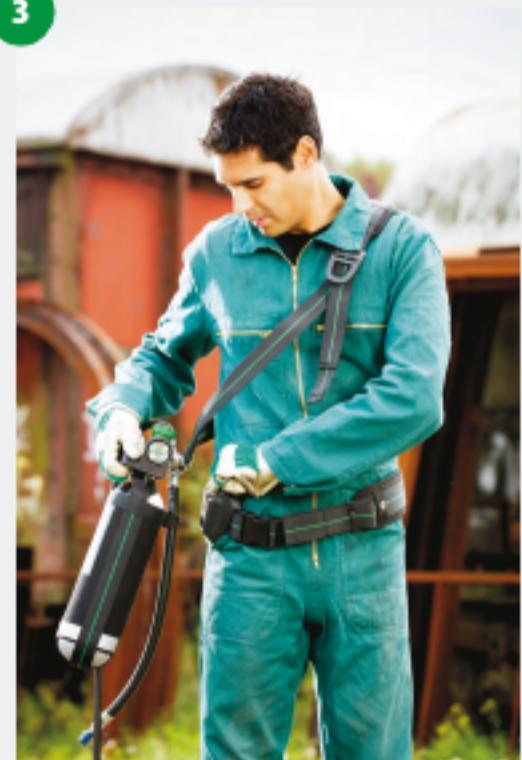

Attach cylinder to holster assembly and adjust shoulder strap.

4



Put on facepiece, adjust harness straps and test facepiece tightness.

5



Check gauge to ensure fully pressurized cylinder. Pull on airline hose, remove protection cap and connect pigtail to airline.*

6



Attach demand valve to facepiece and inhale once forcefully.

* Only for PremAire Combination equipped with an Automatic Shut-Off Valve (approved to EN 1609-3-1). Generation is not available. It is also possible for PremAire Combination to be used with a DN 400 only during escape as an emergency air source.



facebook.com/MSAsafety



youtube.com/MSAsafety

MSAsafety.com